



Recommended basic setting:

- (1) Turn on the device using the central button between "ECO" and "FAN". This will make the ON symbol on top of the air conditioning unit illuminate.
- (2) Pull the sliding cover down and use the "Mode" button to select either:
Heating: sun symbol, or
Cooling: snowflake symbol
- (3) Close the sliding cover again and set your desired temperature with the arrow keys. With the "Fan" button, you can adjust the fan speed. We recommend "A" = Auto.

Tips:

- Please point the remote control at the bottom right corner of the radiator, which is where the sensor is located. It responds with a "beep".
- For technical reasons, the response time of the device is significantly slower than that of a fan heater. This is particularly true when you have just turned the device on.
- If a room is cold and you want to warm it up quickly, it does not help to set an excessively high temperature. It is more effective to set the fan strength to "A" (step (4) above). This makes the fan operate intensively, which will heat the room as fast as possible. It will slow down and work more quietly once the desired temperature is reached.